


REPLACE ALL BATTERIES AT ONCE

Your ANT+™ computer should let you know when your batteries are low.

You will need to change all four batteries at once.


To open, simply use the 2 mm hex key.

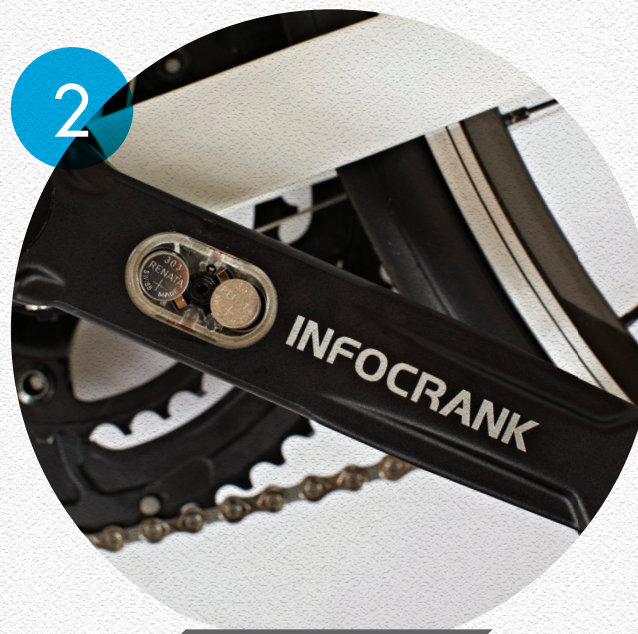

ORIENTATION OF BATTERIES

You'll need 4 x SR44 silver oxide batteries. Be sure you buy the best quality available for the longest usage time.

The batteries should have the +ve terminal facing you.

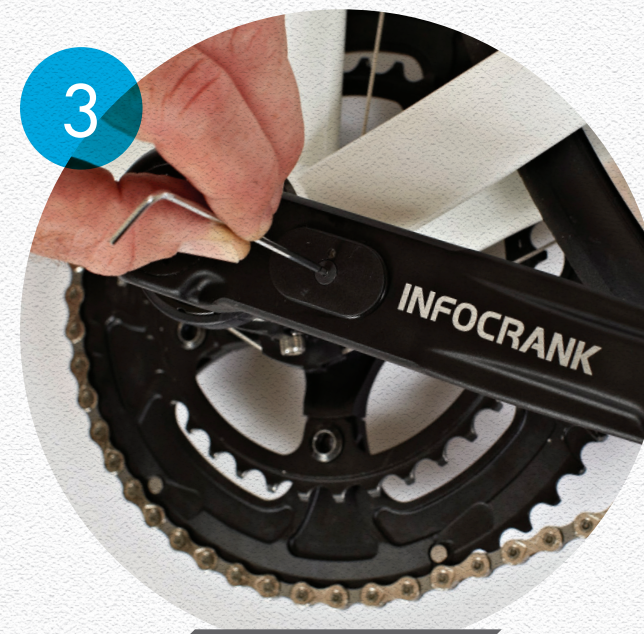

CLOSING THE COVER

To close your battery cover, simply place batteries in and use your 2 mm hex key to tighten the screw.

Be careful not to over-tighten your battery cover. Stop tightening as soon as resistance is felt, which should happen once the cover is flush with the crank arm. Over-tightening will not improve waterproofing seal or performance.

Ensure you have the LED light hole at the top of your crank.



FLASHING LIGHTS

Every time the batteries are replaced or the cover is opened, the LED light will flash quickly until you rotate the cranks past the cadence magnets on both sides.

It is very important that every time you change the batteries you turn the crank arms one full rotation to avoid draining the batteries.

The LED light will flash each time a cadence pulse is sensed and will continue to flash as it passes the magnet for the first five minutes of your ride.

WARRANTY INFORMATION

InfoCrank (the product or device, in its entirety) is warranted to be free from defects in materials or workmanship for 2 years from the date of purchase. Within this period, Tough Torque Limited trading as Verve Cycling will, as its sole option, repair or replace any components that fail in normal use. Such repairs or replacement will be made at no charge to the customer for parts or labor, provided the customer shall be responsible for any transportation cost. This warranty does not apply to: (i) cosmetic damage, such as scratches, nicks and dents; (ii) consumable parts, such as batteries, unless product damage has occurred due to a defect in materials or workmanship; (iii) damage caused by accident, abuse, misuse, water, flood, fire, or other acts of nature or external causes; (iv) damage caused by service performed by anyone who is not an authorized Affiliate of Verve Cycling; (v) damage to the product that has been modified or altered without the written permission of Verve Cycling; or (vi) damage to a product that has been connected to power and/or data cables that are not supplied by Verve Cycling. In addition, Verve Cycling reserves the right to refuse warranty claims against products or services that are obtained and/or used in contravention of the laws of any country.

Repairs have a 90-day warranty. If the unit sent in is still under its original warranty, then the new warranty is 90 days or to the end of the original 2 year warranty, depending upon which is longer.

The warranties and remedies contained herein are exclusive and in lieu of all other warranties express, implied, or statutory, including any liability arising under any warranty of merchantability or fitness for a particular purpose, statutory or otherwise. This warranty gives you specific legal rights, which may vary from state to state and by country.

In no event shall Verve Cycling be liable for any incidental, special, indirect, or consequential damages, whether resulting from the use, misuse, or inability to use this product or from defects in the product. Some states or countries do not allow the exclusion of incidental or consequential damages, so the above limitations may not apply to you.

Verve Cycling retains the exclusive right to repair or replace (with a new or refurbished replacement product) the device or software or offer a full refund of the purchase price at its sole discretion. Such remedy shall be your sole and exclusive remedy for any breach of warranty.

Please ensure you have checked the FAQ page and instruction manuals carefully to ensure there is no easy fix.

To obtain warranty service: Contact your local Verve Cycling Affiliate or request a repair through the Support page on the Verve Cycling website. Securely pack the device and a copy of the original sales receipt, which is required as the proof of purchase for warranty repairs. Send the device, freight charges prepaid, to the address provided to you. Include your return address and phone number.

Online auction purchases: Products purchased through online auctions (this does not apply to purchases made on vervecycling.com) are not eligible for warranty coverage. Online auction confirmations are not accepted for warranty verification. To obtain warranty service, an original or copy of the sales receipt from the original retailer is required. Verve Cycling will not replace missing components from any package purchased through an online auction.

OBTAIN WARRANTY SERVICE IN 2 EASY STEPS

1. Request a repair

On the Support page use the contact form to tell us what the issue is. You will need the device serial number (if applicable), a return shipping address and a daytime phone number.

2. Send Us the Device

Ship the device (insured) to the provided address.

Notes

Please read these instructions carefully before trying to install InfoCrank. Be sure to follow all the steps closely.

Support

If you have any questions, we are here to help. Go to our Support page or email us at support@vervecycling.com

© 2014 Tough Torque Limited trading as Verve Cycling. All rights reserved.
The InfoCrank logo is a registered trademark of Tough Torque Limited trading as Verve Cycling.
The ANT+ logo is registered trademark of Dynastream Innovations Inc.

Photography by Sabine Albers Photography | Graphic Design by amymoffatt.com